

# Grazer LED Carousel

## Installation instructions

Instructions de montage  
Montageanleitung  
Montage Instruktle  
Istruzioni di montaggio

Instrucciones de montaje  
Instruções de montagem  
Monteringsinstruktioner  
Monteringsvejledning

Kokoonpano- ja kiinnitysohjeet  
Montaj yönergeleri  
Οδηγίες συναρμολόγησης  
Instrukcja montazu

Szerelési utasítások  
Návod k montáži  
ИНСТРУКЦИЯ ПО МОНТАЖУ  
Návod k montáži



	LED's	Voltage	Class	Frequency	Current(mA)	P.Max(W)	kg
BCG431 LED-LXN/BL PSU 100-240V CLII	1	100-240 V AC	I	50-60Hz	17~25	1.7	0.5
BCG431 LED-LXN/AM PSU 100-240V CLII	1	100-240 V AC	I	50-60Hz	17~25	1.7	0.5
BCG431 LED-LXN/CW PSU 100-240V CLII	1	100-240 V AC	I	50-60Hz	17~25	1.7	0.5
BCG431 LED-LXN/RD PSU 100-240V CLII	1	100-240 V AC	I	50-60Hz	17~25	1.7	0.5
BCG431 LED-LXN/GN PSU 100-240V CLII	1	100-240 V AC	I	50-60Hz	17~25	1.7	0.5
BCG432 LED-2xLXN/BL PSU 100-240V CLII	2	100-240 V AC	I	50-60Hz	22~35	2.4	0.6
BCG432 LED-2xLXN/AM PSU 100-240V CLII	2	100-240 V AC	I	50-60Hz	22~35	2.4	0.6
BCG432 LED-2xLXN/CW PSU 100-240V CLII	2	100-240 V AC	I	50-60Hz	22~35	2.4	0.6
BCG432 LED-2xLXN/RD PSU 100-240V CLII	2	100-240 V AC	I	50-60Hz	22~35	2.4	0.6
BCG432 LED-2xLXN/GN PSU 100-240V CLII	2	100-240 V AC	I	50-60Hz	22~35	2.4	0.6



